

DMS、CMS Series

Socket

Ordering code

F - DMS C08 2 020

 
 
 
① ② ③ ④ ⑤






① Category code	F: Accessory		
② Specification code	DMS: Digital Magnetic Sensor		
③ Socket type	C08:M8 socket	C12:M12 socket	
④ Wire type	2: 2-wire type	3: 3-wire type	
⑤ Wire length	020: 2 meters	030: 3meters	050: 5meters

Appearance

M8 socket

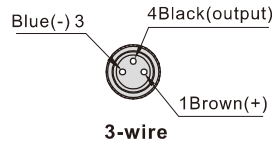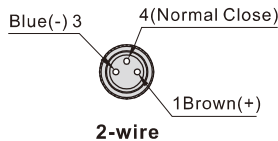

M12 socket

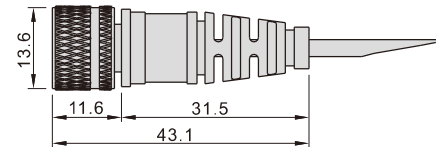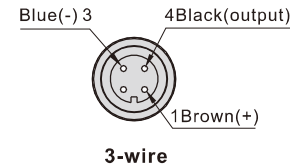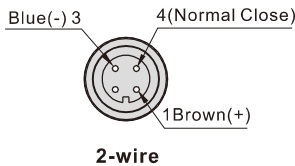   

Instruction

- Sensor shall not fall down or bear great impact when it is installed.
- The wire of the Sensor shall not move with the action of cylinder.
- Clamping torque shall be within the allowable scope when the Sensor is installed(0.15~0.2Nm).
- Sensor shall be installed in the middle position of the action scope.
- Sensor wiring:
 - The wire is unable to bear repetitive torsion and tension. Please wire an external load before switch the power on.
 - No poor insulation in wire.
 - Do not wire with power line, high voltage line or use one wiring pipe.
 - Please wire the circuit correctly base on the circuit diagram.
- Execute scheduled maintenance by the following guidelines:
 - Make sure the sensor is firmly fixed.
 - Make sure the wire is intact.
 - Make sure that LED indicate the movement of cylinder correctly.
- Application of environment:
 - It is Not allow to use the sensor in the environment with explosive gas.
 - Magnetic sensor shall not be used in the environment with external magnetism.
 - Magnetic sensor shall not be used in the environment that is always eroded by water.
 - Magnetic sensor shall not be used in the environment with oil moisture or chemical substance.
 - Magnetic sensor shall not be used in the environment with periodically changing temperature.
 - Magnetic sensor shall not be used in the environment with excessively great impact.
 - Magnetic sensor shall not be used in the environment with sources of electrical pulse.
 - Avoid the environment with accumulated iron power and dense magnetic objects.